

INBUILT WOODHEATER ASSEMBLY INSTRUCTIONS

Step 1

Unpack all parts and lay out ready for assembly.
Be careful not to scratch the paintwork.

Step 2

Remove door and place safely away from assembly area.
Procedure: Open door approximately half way, hold door handle in right hand, place left hand under door and lift up door about 10 mm. Tilt top of door toward you to clear top hinge pin, then allow door to drop down until completely clear of hinge.

Step 3

Remove front cover, so fan is accessible by removing screws holding cover on; also unscrew the air control knob.

(Note: Port Phillip cover has two screws and sits on pins for location.

Series 5 Inbuilts have four screws, 2 at bottom and 2 at topside of cover).

Step 4

Clip right side panel into position, making sure tabs at rear fit into bridge openings in side of heater body.

When in place, 3 screws in front vertical section can be inserted.

(4 for Port Phillip heaters). See Figure 1

Step 5

Once right-hand side panel is firmly in place, the two earth wires (green / yellow) must both be connected to the stud on the heater base. Procedure: Remove nut from earth stud, place the two eyelet lugs of earth wires onto contact washer, screw nut back onto stud and make sure the nut is tightened securely. See Figure 2

Step 6

Connect the fan plugs, ensuring male and female connectors are pushed together firmly, then check that all wiring is sound in place and not touching heater body parts. (Except for earth wire connections.)

Step 7

Fit left hand side panel by repeating step 4 (Exception: no wiring involved).

Step 8

Fit mantle by unscrewing bolts to allow them to slide down into slots at top of side-panels until the mantle sits flat on brackets; then tighten bolts firmly.

Step 9

Replace lower cover and screw on air control knob again.

Step 10

Replace door (reverse procedure of step 2) and heater is now ready for installation.

INBUILT WOODHEATER ASSEMBLY INSTRUCTIONS

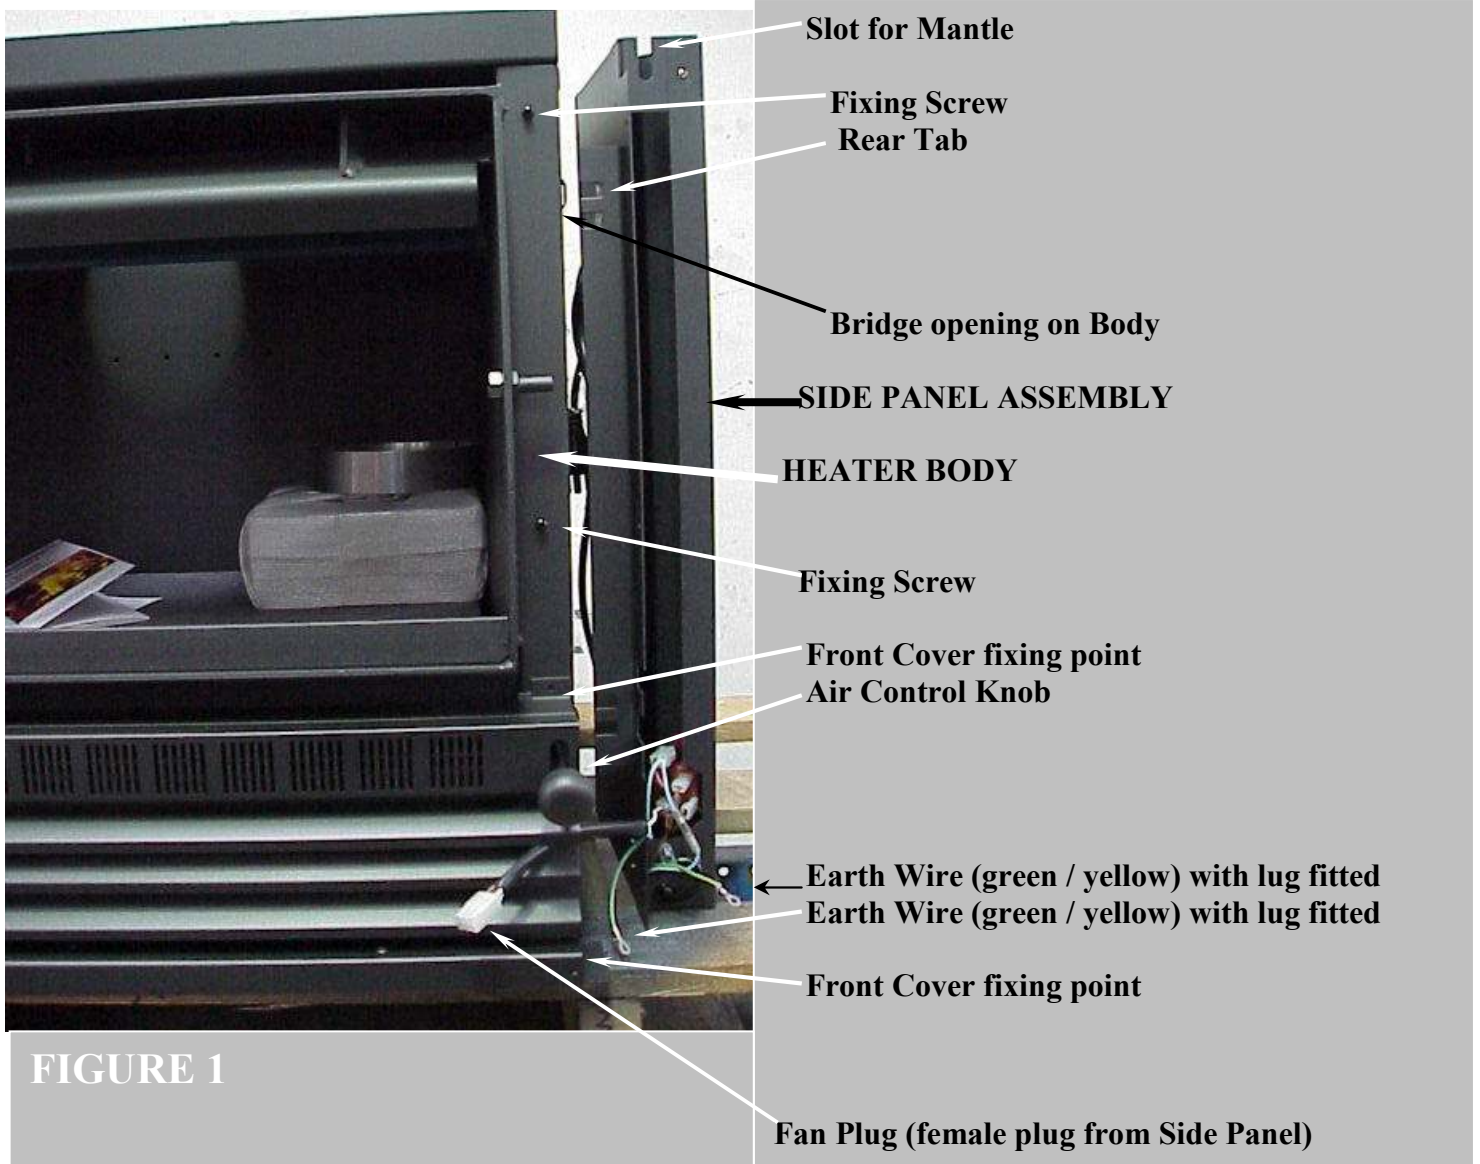


FIGURE 1

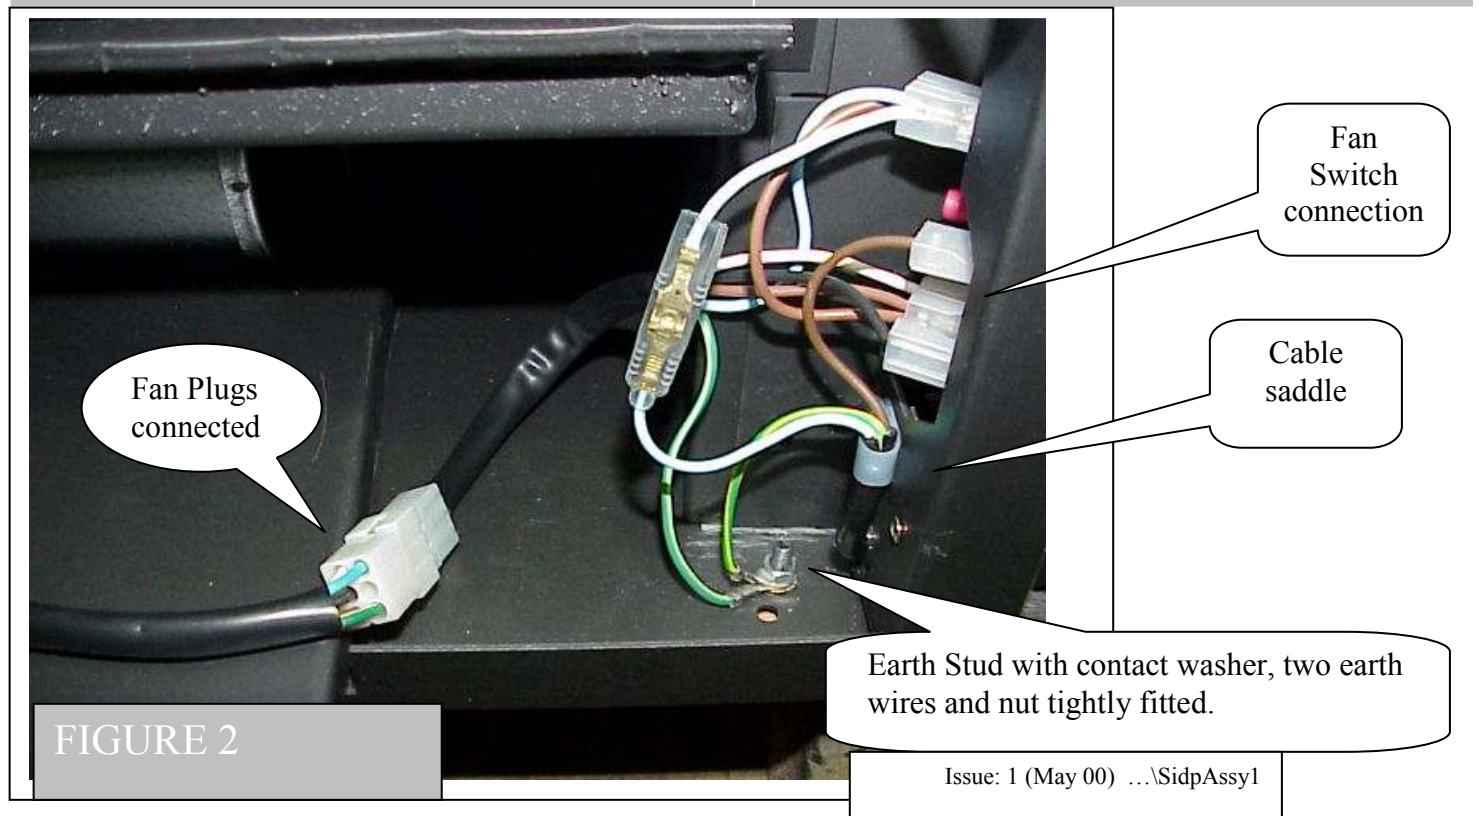


FIGURE 2